 


P3. FAQ

Q1: Power On Module, RX Command ,no feedback :

1> Check the indicator Light : Flash or not

 
2>Make sure the COM NO : Correct or not

a)  Baud Rate Parameter: 115200

b)  Serial Port Close or Open

c) COM NO, whether is same as the device management of computer displaying

d) RXD Pin connect to Module TXD Pin, TXD Pin connect to Module RXD Pin.

e)  whether click this button.

Q2: Check the module whether under connection status

Remarks: If the module already connected to the smart phone, the module received AT command information will be sent to the smart phone as the common data information, will not execute the AT Command.

Q3: If already follow the steps as above showing, still can not identify the AT Command, better to make the module connect the smart phone APP, using the APP to send "12345" to the module, using the OSC to monitor the TXD of the module, whether there coming out the wave shape. Send the data to the module, using the OSC to monitor the RXD of the module, whether there coming out the wave shape, meanwhile, check the smart phone get the data or not.

Q4: Android Smart Phone why can not use the BLE:

1. Some old android smart phone not support BLE(We suggest to use our Bluetooth dual mode module)

Shenzhen Feasyn Technology Co., Ltd